

Recessed LED Panel

INSTALLATION GUIDE

990.0437.01 - 09/01/2024

Important



The LED module in this luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire must be replaced.



The control gear supplied with this luminaire shall only be replaced by the manufacturer, service agent or a similarly qualified person

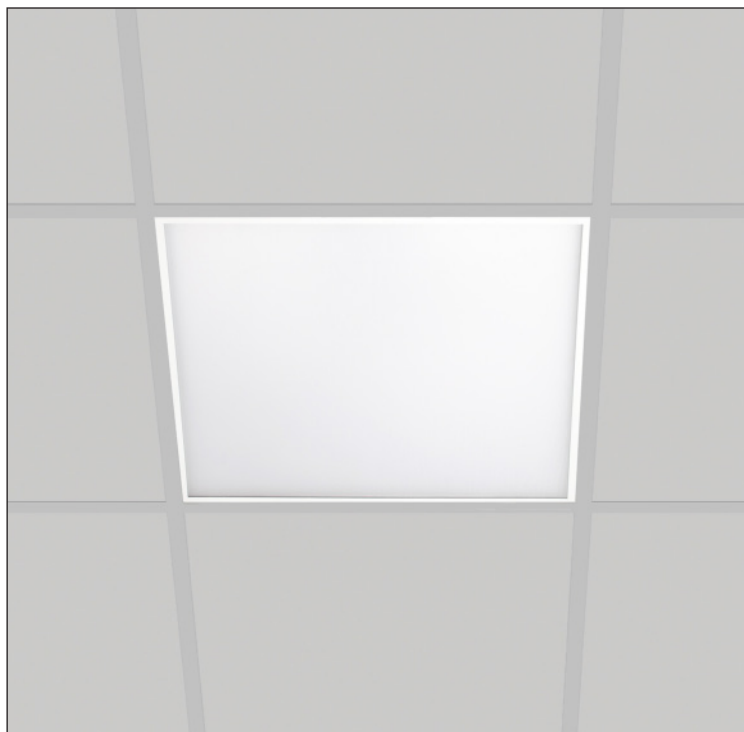


This luminaire must not be covered with thermally insulating material.

For light source energy class, please refer to relevant product technical data sheet for further information.

Any ingress protection rating stated on the product label is from the room side once installed.

Please retain this guide for future reference and recycle packaging.

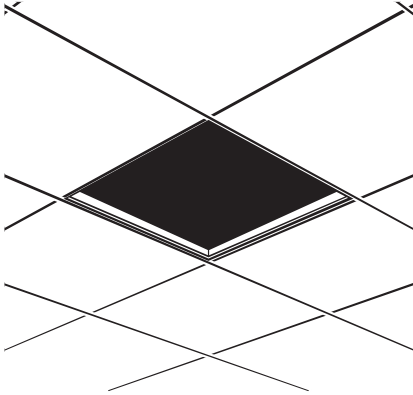


1

Isolate mains supply before commencing installation

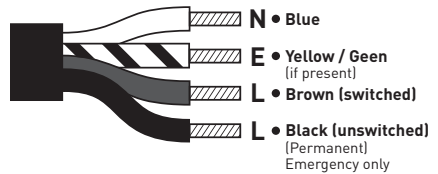


- IMPORTANT: Check ceiling grid has sufficient load-bearing capacity to support the luminaire.
- Remove ceiling tile at desired location.

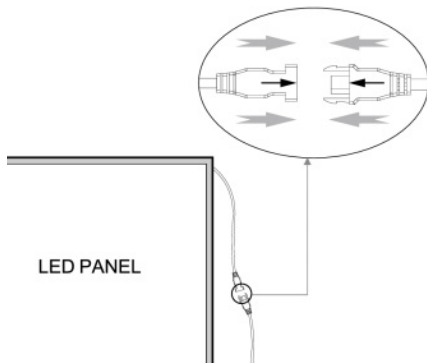
**2**

Connect LED driver to mains supply

- Terminal block not included. Installation must be performed by a qualified person in accordance with the latest edition of the IEE wiring regulations BS7671.
- If no terminal block is available, carefully remove supply leads from control gear and connect directly into terminals, taking care to follow markings on housing.
- For variants fitted with DALI control gear, please refer to supplementary installation guide.

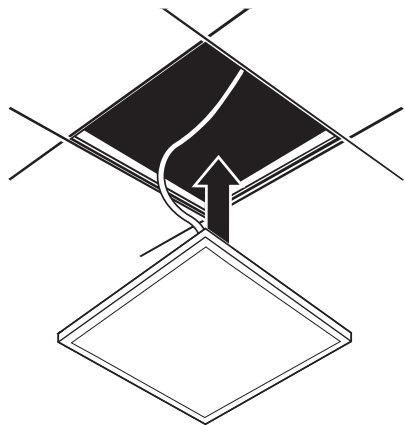
**3**

Connect LED driver to panel.

**4**

Insert luminaire into ceiling aperture

- Ensure that there is at least 50 mm airspace around the luminaire body and all control gear.



Reinstate mains supply

