INSTALLATION GUIDE:

LED DOWNLIGHT









 



The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in

IMPORTANT:

accordance with the latest edition of IEE wiring regulations BS7671. NOTE: THE LED MODULES IN THIS LUMINAIRE ARE NON-USER REPLACEABLE.


PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.



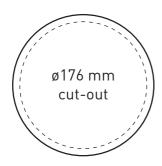

Cut a 176 mm circular hole at the desired location using a holesaw.



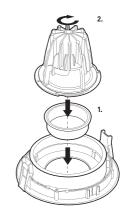


- Install optional accessories into the gimbal first.
- Twist and lock the body into the gimbal, securing the accessory in place.



- Connect the luminaire to the mains supply using a terminal block (not supplied) compliant with the requirements of EN60998-2-1 or 2-2.
- For Touch & Dim / DALI wiring see instruction leaflet 990.0009.01.



Insert the driver into the ceiling void.

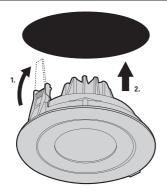

- Retract the fixing springs and insert the fitting into the ceiling void.
- Fitting angle and orientation can be adjusted from below.



REINSTATE MAINS SUPPLY