
LED Track Spotlights


INSTALLATION GUIDE

990.0229.02 Iss 2 - 25/11/2025

Important



The light source in this product shall only be replaced by the original manufacturer, service agent or a similarly qualified person.



Control gear replaceable by a professional

For light source energy class, please refer to relevant product technical data sheet.

The luminaire must be mounted out of normal reach by a competent person.

Please retain this guide for future reference and recycle packaging.



NOTE:

Luminaire style may vary

We reserve the right to amend any product specification without prior notice. Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies with all safety standards set out in BS EN 60598.


Fixed Output

1 Isolate mains supply before commencing installation

NOTE:


Luminaire style may vary

- Push spotlight up into track, listening for a click. Spotlight can only be fitted one way, ensure to check polarity first - **DO NOT FORCE**

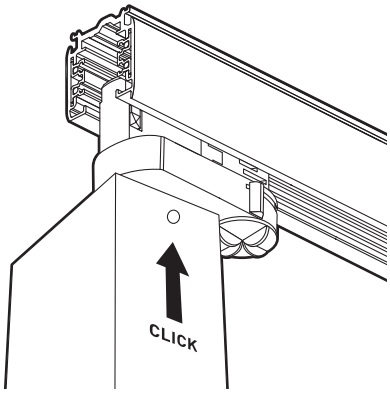


2

- Move fixing arm until you hear a click to secure luminaire into track.
- Select correct circuit using dial: 1, 2 or 3.

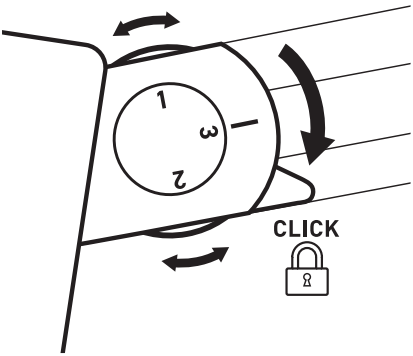

3

- Position spotlight to desired orientation.

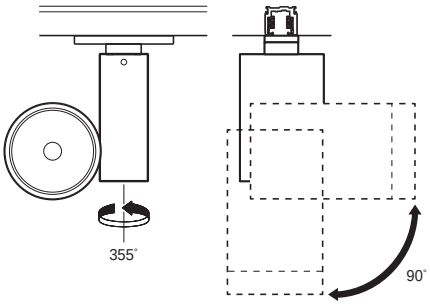


Reinstate mains supply

4 Isolate mains supply

TO REMOVE FROM TRACK

- Fully unlock fixing arm (1).
- Tilting down the fixing arm side first (**2**), carefully remove luminaire from the track (**3**).

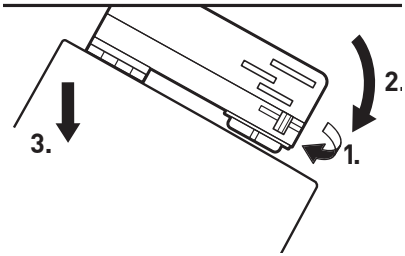

Reinstate mains supply


DALI

1 Isolate mains supply before commencing installation

NOTE:


Luminaire style may vary

- Push spotlight up into track, listening for a click. Spotlight can only be fitted one way, ensure to check polarity first - **DO NOT FORCE**

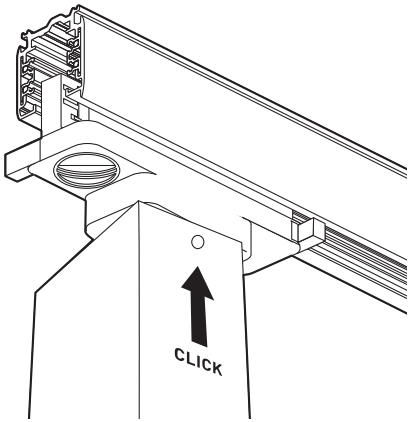


2

- Turn both fixing arms until you hear a click (**1**).
- Select correct circuit (1, 2 or 3) (**2**).

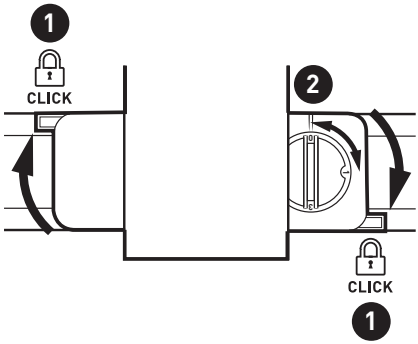

3

- Position spotlight to desired orientation.

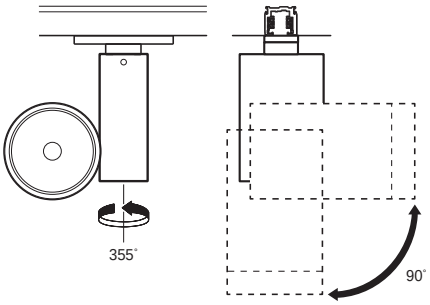


Reinstate mains supply

4 Isolate mains supply

TO REMOVE FROM TRACK

- Fully unlock fixing arms.
- Carefully remove luminaire from track by pulling straight down.

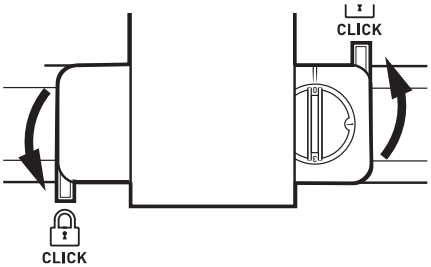

Reinstate mains supply