
IP65 / IK10 Bulkhead

INSTALLATION GUIDE

990.0355.01 REV1 - 17/02/2025

Important



The light source in this product shall only be replaced by the original manufacturer, service agent or a similarly qualified person.




Control gear replaceable by a professional

For light source energy class, please refer to relevant product technical data sheet for further information.

This luminaire has an ingress protection rating of IP65 once installed.


Please retain this guide for future reference and recycle packaging.

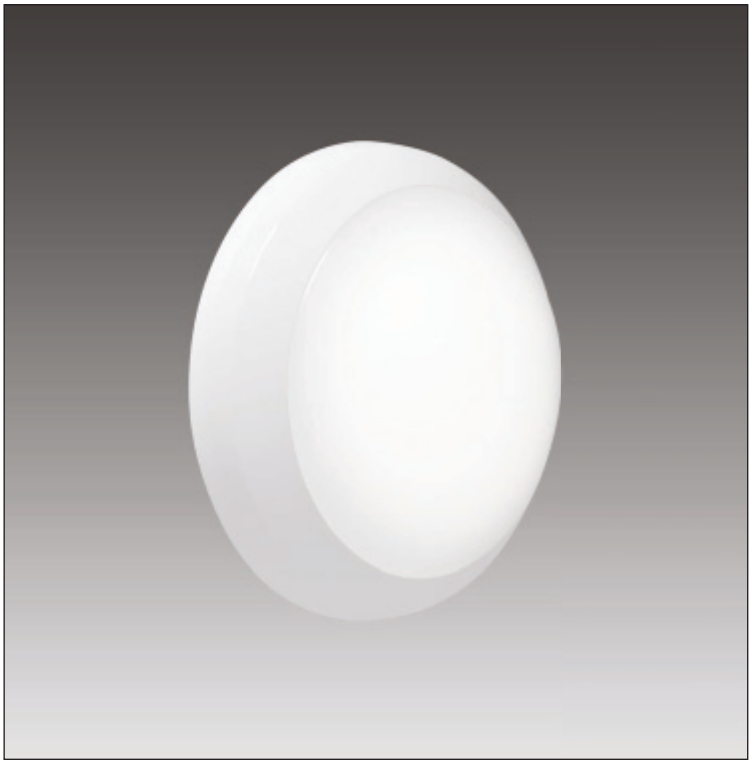

We reserve the right to amend any product specification without prior notice. Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies with all safety standards set out in BS EN 60598.


Isolate mains supply before commencing installation

A

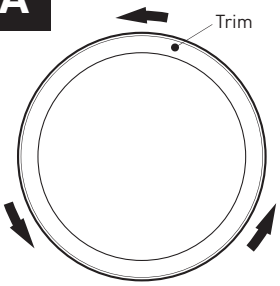

- Turn trim anti-clockwise and remove.


B

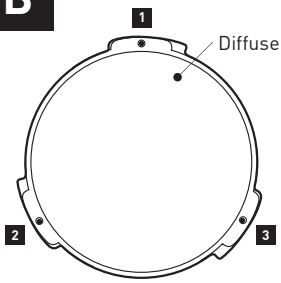

- Remove 3 x fixing screws and remove diffuser.


C

TAKE CARE NOT TO TOUCH LEDs.

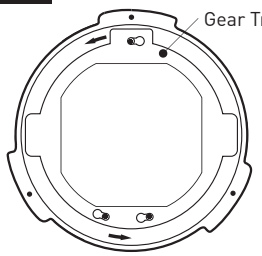

- Loosen 3 x retaining screws and turn gear tray to release. Lift and remove gear tray assembly.


D

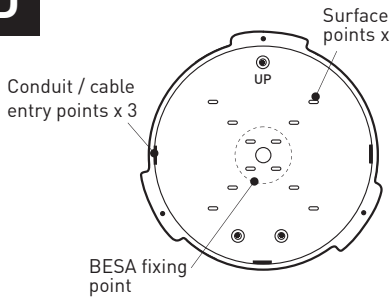

- Ensure mounting surface is flat and even.
- When mounting, note correct orientation marked "UP".
- Cable entries should be drilled as neccessary at one of points indicated.
- Secure luminaire in place at fixing points shown. All fixing points must be sealed to IP65 to maintain the IP rating
- All cable entries must be sealed and secured with an IP65 rated gland (not supplied) to maintain IP rating


E

STANDARD

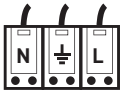

N - NEUTRAL
⏚ - EARTH
L - LIVE (switched)

EMERGENCY

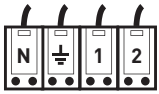

N - NEUTRAL
⏚ - EARTH
1 - SWITCHED LIVE
2 - PERMANENT LIVE

DIMMING



D1 - UPLIGHT SWITCHED LIVE
D2 - UPLIGHT NEUTRAL

- Connect mains supply to terminal block.
- For switch dim link D2 to N, connect D1 to mains supply via a push to make retractive switch.

F

- Ensuring no cables are trapped refit gear tray assembly and tighten screws to secure.
- Refit diffuser and secure screws.
- Refit the bezel.

FOR SENSOR SET-UP, PLEASE REFER TO INSTALLATION GUIDE **990.0367.01**

Reinstate mains supply