INSTALLATION GUIDE:

RECESSED LINEAR 990.0382.01




NOTE: THE LED MODULES IN THIS LUMINAIRE ARE NON-USER REPLACEABLE.
PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

A SOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION


IMPORTANT: DO NOT USE POWER TOOLS TO TIGHTEN FIXINGS ON THIS PRODUCT.


Cut Out Sizes

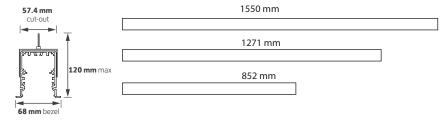

- Cut a rectangular hole in the ceiling based on length of fitting.


 Prise out the diffuser using a plastic lever tool (not supplied) or card, starting in the <u>centre of the diffuser</u> and working outwards.



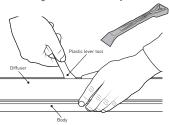


C

- Using a terminal driver, ease out the LED tray retaining clips, whilst pulling the tray up, one side at a time, and remove the LED tray as shown
- Slide tray to one end and remove

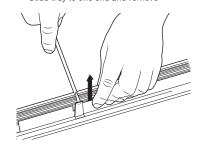

D

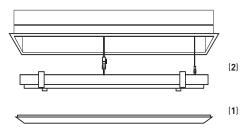

- Remove diffuser (1).
- Remove LED tray as shown (2).
- Unclip module plugs / earthing spade.

IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS7671.

